

## User Guide


Cable stripper for quick, precise sheathing stripping of all common round cables from 4-16 mm  $\varnothing$ . To adjust the depth of cut for insulation thickness turn screw at end of handle.

## Cable Stripper No. 10160 - 10700



### A

Adjust blade cutting depth by turning the red adjustment screw.

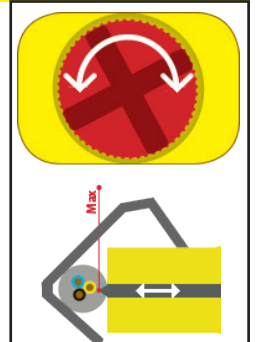

### B

Press tool against cable as shown, exerting light pressure with your thumb.



### C

Rotate to execute one or two circular cuts.



### D

Pull tool in direction of arrow to execute a longitudinal cut.



### E

Peel off the sheathing. Finished!



**Warning: Never use tool on or near live electrical circuits!**

**User Guide**  
**Exchange of blades**




Each Original-JOKARI Cable Knife is supplied with a spare blade stored inside. Additional blades are available as a set of 3, part no. 19000.

The blades fit all Original-JOKARI Cable Knives.

Required tool: Recessed Head Screwdriver PZ 1




**Cable Stripper**  
**No. 10160 - 10700**

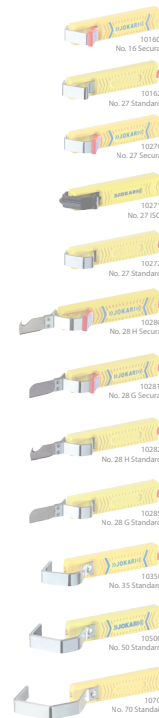


Video Blade exchange

Unscrew 4 screws at handle.

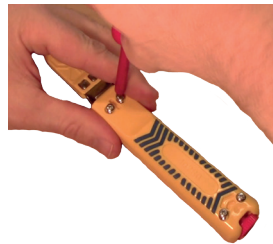


Open handle.

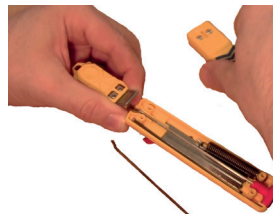

Take off inner blade together with adjustment



Take blade out of adjustment wheel.

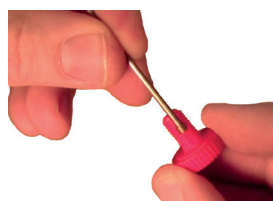

Secure handle with all 4 screws.

Close handle.

Insert blade and adjustment wheel back into knife guide inside handle.

Insert new blade into adjustment wheel.