LED LITE™
Energy Saving LED

LTCCH10

RGBW Colour Changing Harness
10m x 20 lampholders

A 10m harness with party LED light kit of 20 x 0.6W RGBW LED lamps.

This all-in-one kit includes wireless RF remote and allows you to control/change the lamp colours. In addition to monochrome static colours it has multicolour static and jumping modes and a total of 8 built-in lighting modes. Up to 3 harnesses can be linked together.

REMOTE CONTROL SPECIFICATIONS:

- Control Distance: up to 8m
- Remote Control Mode: RF
- Remote Control Frequency: 433MHz
- Number of Keys: 24 keys
- Modes: 8 modes adjustable
- Brightness and speed adjustments
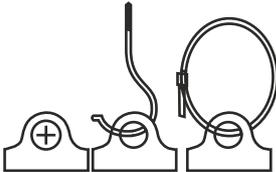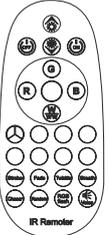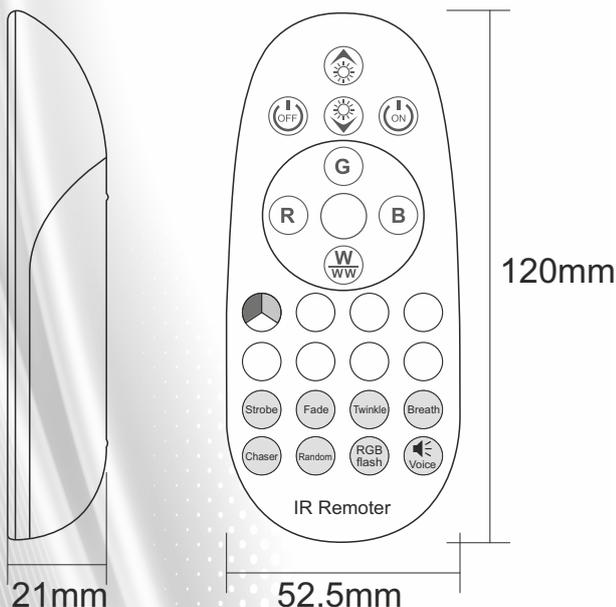- Battery Type: 2xAAA Batteries (not included)

SPECIFICATIONS:

- Voltage range: 220-240 V/AC
- Frequency: 50/60 Hz
- Output Voltage: DC 12V
- Ingress Protection: IP65
- Single RGBW Lamp Power: 0.6W
- 20 S14 RGBW Lamps included
- Lamp cap: E27
- Control Mode: Button and Remote Control
- 3 metres lead-in to the first lampholder
- 50 cm spacing between lampholders
- 20 lampholders / 10 metres
- Cable Type: 2 core VW-1 Cable
- Link up to 3 harnesses together
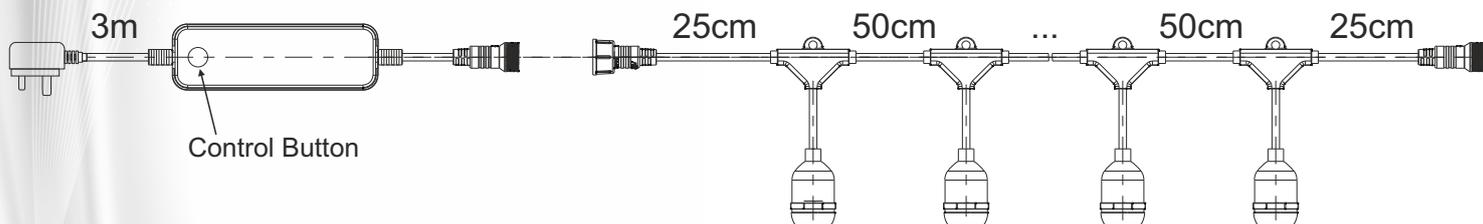- Controller button to randomly change the colour or mode.

FLEXIBLE MOUNTING OPTIONS
Mount on a flat surface or hang from above. Mounting hardware not included.

CONNECT MULTIPLE STRINGS
Link up to 3 harnesses together

WEATHERPROOF. IP65 RATED

24 KEYS REMOTE CONTROL

20 RGBW LAMPS

20 LAMP HOLDERS

LTCCH10 - RGBW Colour Changing Harness
10m x 20 lampholders

Spacing & Dimensions:

3m

Control Button

25cm   50cm   ...   50cm   25cm

120mm

21mm   52.5mm

IR Remoter

Remote Control Functions:

Dimming/Speed buttons

OFF button   ON button

Static Red, Green Blue and White (Cool and Warm)

Static multicolour button

Static monochrome buttons (7 colour choices)

Mode selector buttons Toggle ON/OFF (8 modes)

IR Remoter

ON/OFF Buttons - Switch the unit ON or OFF.

Dimming/Speed - When in static monochrome mode use this button to adjust the brightness of the light, or change the speed of the colour modes.

Static R, G, B and White - Use the buttons to directly select the desired colour. Press the White button to change between Cool White and Warm White.

Static Multicolour - Multiple colour static mode.

Static Monochrome - Use the buttons to directly select the desired colour (7 choices).

STROBE - Two colours jumping change. Press button to change the colours.

FADE - Automatic change of colours with blending effect.

TWINKLE - Monochrome twinkle effect. Press button to change the colour.

BREATH - Automatic change of colour with breathing effect.

CHASER - Monochrome jumping effect. Press button to change the colour.

RANDOM - Multicolour automatic jumping change of colours.

RGB FLASH - Monochrome automatic change of colours. Press button to change the colour.

VOICE - Multicolour Flash (Voice function not operational).